



ATTIX 30 / BATT / PC / XC ATTIX 40 / PC / XC ATTIX 50 / PC / XC

Operating Instructions

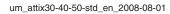





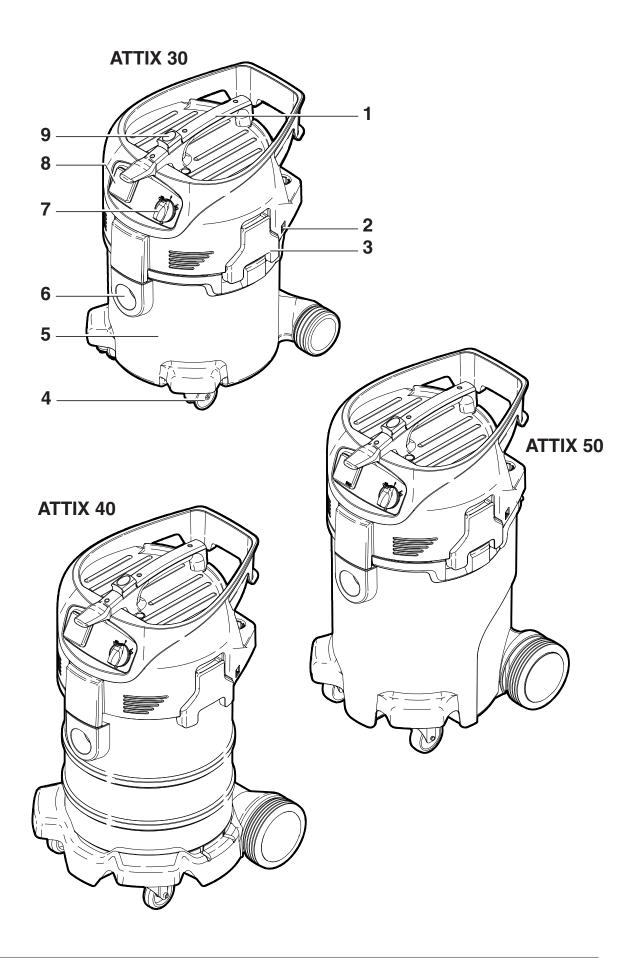

(EN)

Contents

1	Important safety instructions			2
2	Description	2.1	Operating elements	
		2.2	Operating panel	7
3	Before starting the	3.1	Assembling the vacuum cleaner	
	cleaner	3.1.1	Taking accessories out of the packaging ¹)	
			Attaching the suction pipe holder to the suction pipe ¹	
		3.2	Loadiing and inserting the battery (ATTIX 30-01 PC BA	
		3.3	Inserting the filter bag	9
4	Control / Operation	4.1	Connections	11
		4.1.1	Connecting the suction hose	11
			Electrical connection	
		4.2	Switching on the vacuum cleaner	
		4.2.1	Switch " 0-I " ¹)	11
			Switch " auto-0-I " ¹)	
			Suction power control ¹)	
			Auto-On/Off-Operation - "auto" switch position ¹⁾	
		4.3	Cleaning the filter element	13
		4.3.1	Cleaning the filter element " Push&Clean System "	
			(ATTIX 30- / 40- / 50-xx PC)	13
		4.3.2	Cleaning the filter element " XtremeClean "	
			(ATTIX 30- / 40- / 50-xx XC)	13
5	Applications and	5.1	Techniques	
	methods		Picking up dry substances	
		5.1.2	Picking up liquids	14
6	After using the cleaner	6.1	Switching the vacuum cleaner off and storage	15
7	Maintenance	7.1	Maintenance plan	16
		7.2	Maintenance work	16
		7.2.1	Emptying the dirt tank	16
		7.2.2	Replacing the filter bag	17
			Replacing the disposal bag	
		7.2.4	Replacing filter element (Push & Clean System)	19
		7.2.5	Replacing filter element (XtremeClean System)	20
8	Troubleshooting			21
9	Further information	9.1	Recycling the cleaner	22
		9.2	Guarantee	
		9.3	Tests and approvals	
		9.4	EC declaration of conformity	
		9.5	Technical data	
		9.6	Optional accessories	23

I Important safety instructions

Symbols used to mark instructions

Prior to using the appliance for the first time, be sure to read this document through and keep it ready to hand.

DANGER					
Danger that leads directly to serious or irreversible injuries, or even death.					
WARNING					
Danger that can lead to serious injuries or even death.					
CAUTION					
Danger that can lead to minor injuries and damage.					

The appliance must

- only be used by persons, who have been instructed in its correct usage and explicitly commissioned with the task of operating it
- only be operated under supervision
- not be used by children
- 1. Do not use any unsafe work techniques.
- 2. Never use the vacuum cleaner without a filter.
- 3. Switch off the appliance and disconnect the mains plug in the following situations:
 - Prior to cleaning and servicing
 - Prior to replacing components
 - Prior to changing over the appliance
 - If foam develops or liquid emerges

Besides the operating instructions and the binding accident prevention regulations valid in the country of use, observe recognised regulations for safety and proper use.

Purpose and intended use The appliance is suitable for picking up dry, non-flammable dust and liquids.

The appliance is suitable for commercial use, such as e.g. in • Hotels, Schools, Hospitals, Factories, Shops, Offices, Hire shops

Any other use is considered as improper use. The manufacturer accepts no liability for any damage resulting from such use. The risk for such use is borne solely by the user.

Proper use also includes proper operation, servicing and repairs as specified by the manufacturer.

Transport	 Before transporting the dirt tank, close all the locks. Do not tilt the cleaner if there is liquid in the dirt tank. Do not use a crane hook to lift the cleaner. 				
Storage	1. Store the appliance in a dry place, protected from frost.				
Electrical connection	 It is recommended that the vacuum cleaner should be connected via a residual current circuit breaker. Arrange the electrical parts (sockets, plugs and couplings) and lay down the extension lead so that the protection class is main- tained. Connectors and couplings of power supply cords and extension leads must be watertight. 				
Extension lead	ufacturer or one of 2. When using an exitions of the cable:	tension lead, check the	e minimum cross-sec-		
	Cable length	Cross s < 16 A	section < 25 A		
	up to 20 m	1.5 mm ²	2.5 mm ²		
	20 to 50 m	2.5 mm ²	4.0 mm ²		
Battery Charger	 Only use the battery which is delivered with the charger. Other types of batteries could cause an explosion. Do not attempt to charge alkaline batteries or other types of primary batteries. Do not dispose of batteries in fire as the battery may explode, leak or catch fire. Keep the charger in a dry place (indoor use only). In order to avoid the risk of fire or electrical shock, the charger must be protected against high humidity and water. The charger must not be used if plug or cover are defective not be opened or converted kept away from children not be used unattended be disconnected after use be cleaned with a soft cloth only after the plug is disconnected 				
Warranty	Our general conditions of business are applicable with regard to the guarantee. Unauthorised modifications to the appliance, the use of incorrect brushes in addition to using the appliance in a way other than for the intended purpose exempt the manufacturer from any liability for the resulting damage.				
Tests and approvals	of safety regulations (E	GV A3) and to DIN VD DIN VDE 0702 these te	nce with the provisions E 0701 Part 1 and Part sts must be performed cations.		



Electrical components

DANGER Electric shock due to faulty mains connecting lead. Touching a faulty mains connecting lead can result in serious or even fatal injuries. 1. Do not damage the mains power lead (e.g. by driving over it, pulling or crushing it). 2. Regularly check whether the power cord is damaged or shows signs of ageing. 3. Have the faulty mains connecting lead replaced by your Nilfisk-Alto service representative or a qualified electrician prior to using the appliance again. DANGER The upper section of the vacuum cleaner contains live components. Contact with live components leads to serious or even fatal iniuries. 1. Never spray water on to the upper section of the vacuum cleaner. CAUTION Appliance socket^{*)}. The appliance socket is only designed for the purposes defined in the operating instructions. The connection of different appliances can result in damage. 1. Prior to plugging in an appliance, always switch off the vacuum cleaner and the appliance that is to be connected. 2. Read the operating instructions to the appliance to be connected and observe the safety notes contained in these. CAUTION Damage due to unsuitable mains voltage. The appliance can be damaged as a result of being connected to an unsuitable mains voltage. 1. Ensure that the voltage shown on the rating plate corresponds to the voltage of the local mains power supply.

Picking up liquids

î	

CAUTION

EN)

Do not pick up flammable liquids.

- Before liquids are picked up, always remove the filter bag/ waste bag and check that the float ¹) or the water level limit ¹) works properly.
- 2. The use of a separate filter element or filter screen is recommended.
- 3. If foam appears, stop work immediately and empty the tank.

Hazardous materials

WARNING

Hazardous materials.

Picking up liquids.

Vacuuming up hazardous materials can lead to serious or even fatal injuries

- 1. The following materials must not be picked up by the vacuum cleaner:
 - hazardous dust
 - hot materials (burning cigarettes, hot ash, etc.)
 - flammable, explosive, aggressive liquids (e.g. petrol, solvents, acids, alkalis, etc.)
 - flammable, explosive dust (e.g. magnesium or aluminium dust, etc.)

Spare parts and accessories



CAUTION

Spare parts and accessories.

The use of non-genuine spare parts and accessories can impair the safety of the appliance.

- 1. Only use spare parts and accessories from Nilfisk-Alto.
- 2. Use only the brushes supplied with the vacuum cleaner or specified in the operating manual.

Emptying dirt tank

F N e

CAUTION

Picking up environmentally hazardous materials.


Materials picked up can present a hazard to the environment.

1. Dispose of the dirt in accordance with legal regulations.


EN 2 Description

2.1 **Operating elements**

- Handle with receptacle for electrical lead Fixing point for suction pipe holder 1
- 2
- 3 Retaining clamp
- 4 Castor
- 5 Dirt tank
- 6 Inlet fitting
- 7 Applicance switch
- 8 Appliance socket ¹⁾
- 9 Operating knob for filter cleaning ¹⁾

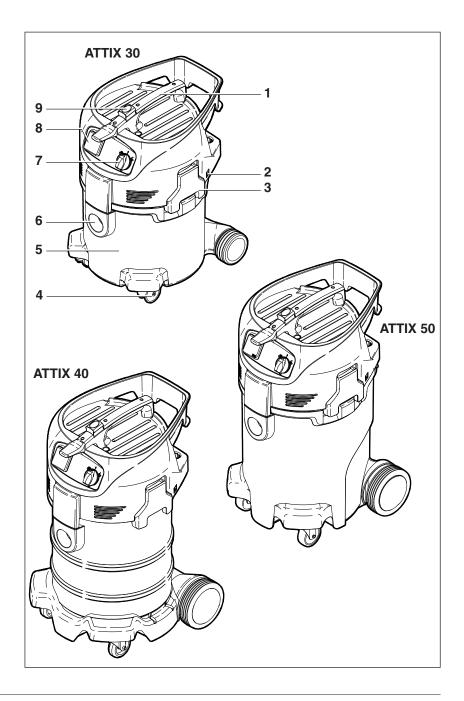




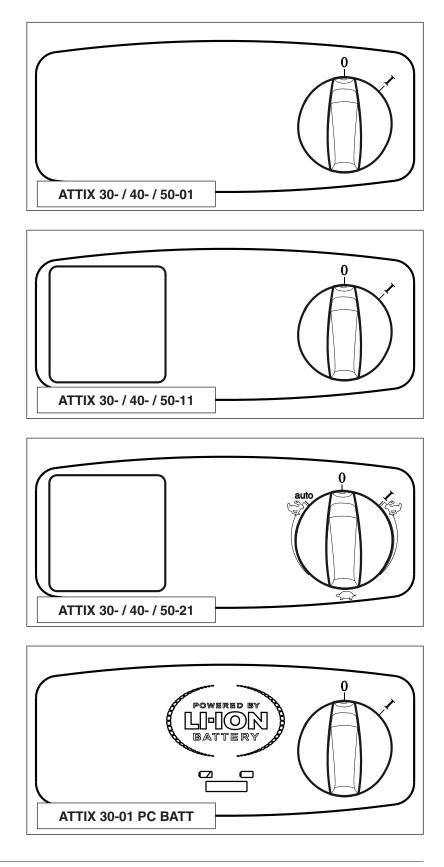


B 3 Before starting the cleaner

- 3.1 Assembling the vacuum cleaner
- 3.1.1 Taking accessories out of the packaging ¹⁾

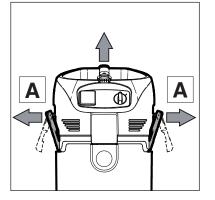


3.1.2 Attaching the suction pipe holder to the suction pipe ¹⁾

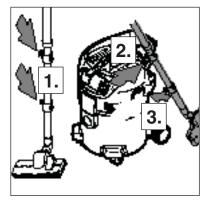


- 1. Take vacuum cleaner and accessories out of the pack-aging.
- 2. The mains plug should not yet be inserted into a socket.
- Open the retaining clamps (B) and remove the upper section of the vacuum cleaner.
- 5. Take the accessories ¹⁾ out of the dirt tank and the packaging.
- 1. Attach the suction pipe holder to the suction pipe.

3.2 Loadiing and inserting the battery (ATTIX 30-01 PC BATT)

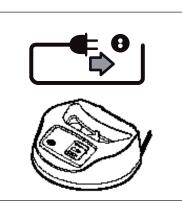


 Insert the power cord of the charger into a properly installed and fused socket with earthing contact.

2. Insert the battery into the charger.

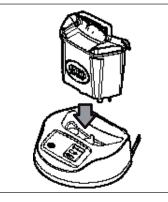




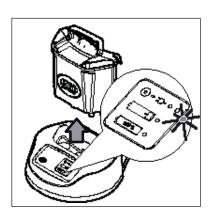

 Remove the battery from the charger after completion of the charching process (LED 100% lights up).


- 4. Insert the battery into the machine and fix it by turning down the carrying handle.

3.3 Inserting the filter bag

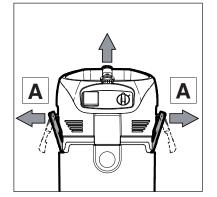


- 1. The mains plug should not yet be inserted into a socket.
- Open the retaining clamps

 (A) and remove the upper sec-tion of the vacuum cleaner.
- 3. Insert the filter bag into the dirt tank.

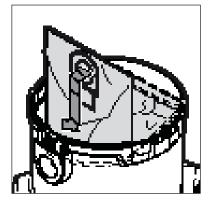



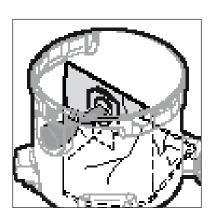


4. Press the filter bag connection firmly on to the inlet fitting.

- 5. Attach the upper section of the vacuum cleaner.
- Close the retaining clamps (A). Ensure that the retaining clamps fit properly.

4 Control / Operation




- 4.1 Connections
- 4.1.1 Connecting the suction hose

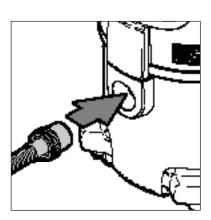

4.1.2 Electrical connection

The operating voltage shown on the rating plate must correspond to the voltage of the mains power supply.

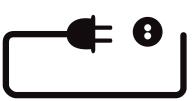


1. Ensure that the cleaner is switched off.

1. Connect the suction hose.


2. Insert the power cord into a properly installed and fused socket with earthing contact.

4.2 Switching on the vacuum cleaner
4.2.1 Switch " 0-I " ¹⁾

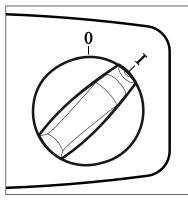


Switch position	Function
0	Off
Ι	On

4.2.2 Switch ,, auto-0-I $^{\prime\prime \ 1)}$

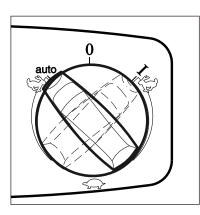

Switch position	Function
0	Off
auto	Auto On/Off
Ι	On / manual mode

4.2.3 Suction power control ¹⁾

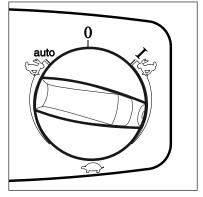


4.2.4 Auto-On/Off-Operation - "auto" switch position ¹⁾


The vacuum cleaner is switched on and off by the power tool connected. Dirt is picked up from the source of dust immediately.


To comply with regulations, only approved dust producing tools should be connected.


The maximum power consumption of the connected electrical appliance is stated in section "Technical data".

Before switching the switch to position "auto", ensure that the tool connected to the appliance socket is switched off.

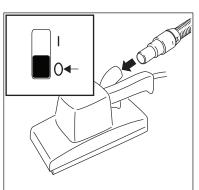

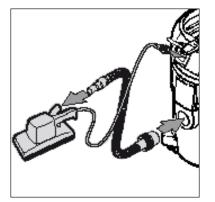

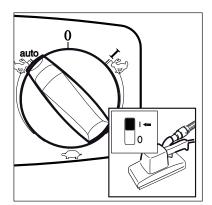

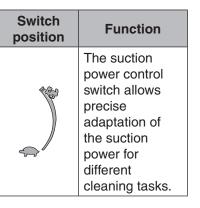

- 1. Switch off the vacuum cleaner.
- 2. Switch off the power tool.
- 3. Connect the power tool and the vacuum cleaner with a suction hose.
- 4. Insert the plug of the power tool into the tool socket on the operating panel of the vacuum cleaner.
- 5. Switch on the vacuum cleaner. Switch in "auto" position.
- 6. Switch on the power tool. The vacuum cleaner motor starts when the connected power tool is switched on.

When the power tool is switched off, the vacuum cleaner continues to run for a short moment so that any dust in the suction hose is conveyed to the filter bag.

4.3 Cleaning the filter element 4.3.1 Cleaning the filter element " Push&Clean System " (ATTIX 30- / 40- / 50-xx PC)

Only for vacuum cleaning without a filter bag and without a cloth insert filter.



If suction performance drops:

- 1. Turn switch to position "I" (maximum suction power).
- 2. Close the nozzles or suction hose opening with the palm of your hand.
- Press the button to start filter cleaning three times. The resulting stream of air removes attached dust from the slats of the filter elements.

4.3.2 Cleaning the filter element " XtremeClean " (ATTIX 30- / 40- / 50-xx XC)

Only for vacuum cleaning without a cloth insert filter.



To ensure that suction performance is always at its best, the filter element is automatically cleaned during operation. We recommend complete cleaning if the filter element becomes extremely dirty.

- 1. Switch off the vacuum cleaner
- 2. Close the nozzles or suction hose opening with the palm of your hand.
- 3. Turn the switch to position "I" and let the cleaner operate for approx. 10 seconds with the suction hose opening closed.


EN 5 Applications and techniques


5.1 Techniques	If used correctly, additional accessories, suction nozzles and suc- tion hoses can enhance the cleaning action and reduce the cleaning effort. Effective cleaning is achieved if you follow just a few guidelines in combination with your own practical experience in special fields. Here are some basic tips.
5.1.1 Picking up dry substances	Before picking up dry substances, always ensure that a filter bag is inserted in the tank (see section "Accessories" for order number). Disposal of the picked up material is then simple and hygienic. After picking up liquids, the filter element is wet. A damp filter ele- ment clogs more quickly when dry substances are picked up. For this reason the filter element should be washed and dried or replaced by a dry element before dry substances are picked up.
5.1.2 Picking up liquids	Before liquids are picked up, always remove the filter bag/disposal bag. The use of a separate filter element or filter screen is recommended.
	If foam appears, stop work immediately and empty the tank. To reduce the amount of foam, use foam killer Nilfisk-Alto Foam Stop
	(see section "Accessories" for order number).

6 After finishing work

(EN)

6.1 Switching the vacuum cleaner off and storage

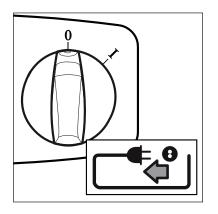

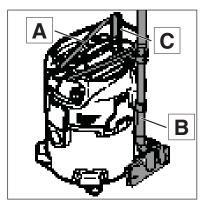

- 1. Switch off the cleaner and pull the mains plug out of the socket.
- 2. Wind up the power cord onto the handle (A). Begin winding up the cord at the cleaner end and not the plug end to prevent the power cord from tangling up.
- 3. Empty the dirt tank and clean the vacuum cleaner.
- After picking up liquids: Store the upper section of the vacuum cleaner separately so that the filter element can dry.
- 5. Hang the suction hose with the floor nozzle (B) in the brackets and pack the accessories (C) away.
- 6. Store the cleaner in a dry room where it is protected from unauthorized use.

7 Maintenance


7.1 Maintenance plan

		After finishing work	When required
7.2.1	Emptying dirt tank	•	
7.2.2	Replacing the filter bag		•
7.2.3	Replacing the disposal bag		•
7.2.4	Replacing filter element (Push&Clean)		•
7.2.5	Replacing filter element (XtremeClean)		•


7.2 Maintenance work7.2.1 Emptying the dirt tank

After emptying the tank: clean the rim of the tank and the seals in the intermediate ring and the upper section of cleaner before refitting them. If the seal or groove is dirty or damaged, the suction performance will be reduced.


Before reinserting the suction hose: clean the inlet fitting and hose collar.

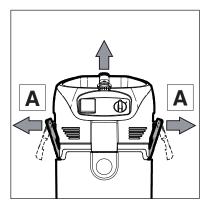

- 1. Switch off the vacuum cleaner and pull the mains plug out of the socket.
- 2. Open the retaining clamps (A) and remove the upper section of the vacuum cleaner.

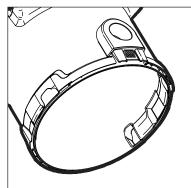


- 3. Tip out the collected dirt.
- 4. Dispose of the dirt in accordance with legal regulations.

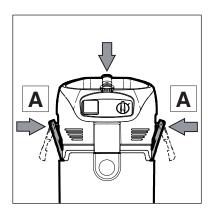


- 5. Attach the upper section of the vacuum cleaner.
- Close the retaining clamps (B). Ensure that the retaining clamps fit properly.


7.2.2 Replacing the filter bag

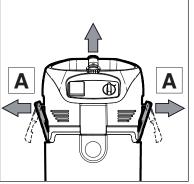


- 1. Switch off the vacuum cleaner and pull the mains plug out of the socket.
- Open the retaining clamps

 (A) and remove the upper section of the vacuum cleaner.

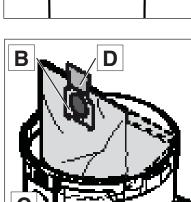

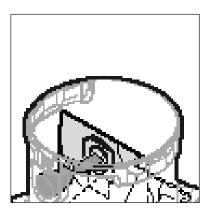

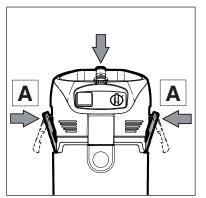


Removing the filter bag:


- 3. Carefully remove the filter bag connection from the inlet fitting (C).
- 4. Close the filter bag connection (D) with the slider.
- 5. Dispose of the filter bag in accordance with legal regulations.


Inserting the filter bag:

- 6. Clean the dirt tank.
- 7. Insert the filter bag in the dirt tank.
- 8. Press the bush of the new filter bag firmly on to the inlet fitting (C).
- 9. Attach the upper section of the vacuum cleaner.
- 10.Close the retaining clamps (B). Ensure that the retaining clamps fit properly.

7.2.3 Replacing the disposal bag

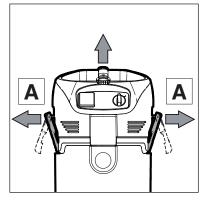

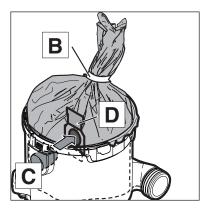

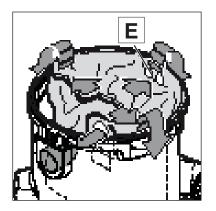

- 1. Switch off the vacuum cleaner and pull the mains plug out of the socket.
- Open the retaining clamps


 (A) and remove the upper section of the vacuum cleaner.

Removing the disposal bag:

- 3. Close the disposal bag with string (B).
- 4. Carefully remove the filter bag connection from the inlet fitting (C).
- 5. Close the disposal bag connection (D) with the slider.
- Dispose of the disposal bag in accordance with legal regulations.

Inserting the disposal bag:


- 7. Clean the dirt tank.
- 8. Insert the disposal bag into the dirt tank.
- Check that the ventilation holes (E) remain inside the dirt tank.
- 10. Press the bush of the new filter bag firmly on to the inlet fitting.
- 11.Fold the top edge of the disposal bag over the rim of the dirt tank.

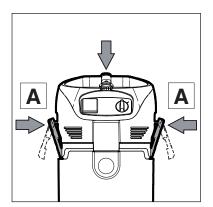


- 12.Attach the upper section of the vacuum cleaner.
- 13.Close the retaining clamps (A). Ensure that the retaining clamps fit properly.

7.2.4 Replacing filter element (Push & Clean System)

Never use the vacuum cleaner without a filter.

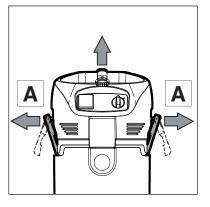


- 1. Switch off the vacuum cleaner and pull the mains plug out of the socket.
- Open the retaining clamps (A) and remove the upper section of the vacuum cleaner.

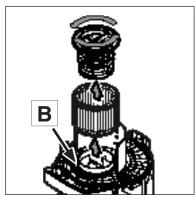


Removing the filter element:


- 3. Turn the filter holder anticlockwise and remove it .
- 4. Carefully remove the filter element.
- 5. Clean the filter seal (B). Check it for damage and replace it if necessary.

Inserting the filter element:
 6. Fit the filter holder and turn it clockwise to secure it.
 7. Fit the filter holder and turn it clockwise to secure it.
 8. Dispose of the used filter element in accordance with legal regulations.

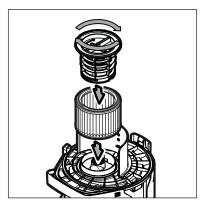

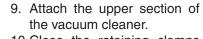


10.Close the retaining clamps (A). Ensure that the retaining clamps fit properly.

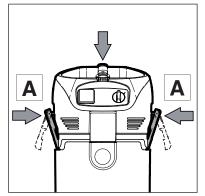



7.2.5 Replacing filter element (XtremeClean System)


Never use the vacuum cleaner without a filter.

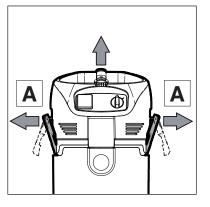



- 1. Switch off the vacuum cleaner and pull the mains plug out of the socket.
- Open the retaining clamps (A) and remove the upper section of the vacuum cleaner.

Removing the filter elements:

- 3. Open filter tension part (B).
- 4. Remove carefully the cassettes with filter elements.

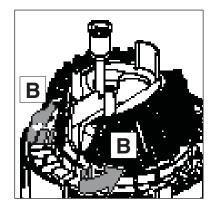

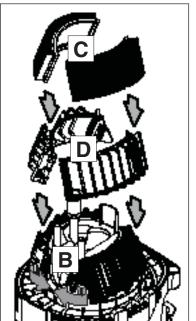

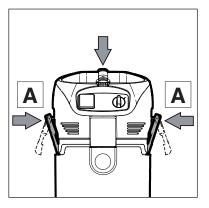

Inserting the filter elements:

- 5. Insert new filter elements (C) into the cassettes (D).
- 6. Attach the cassettes with the filter elements onto the upper section of the vacuum cleaner.
- 7. Fix the filter tension part (B).
- Dispose of the used filter elements in accordance with legal regulations.

- 9. Attach the upper section of the vacuum cleaner.
- 10.Close the retaining clamps (A). Ensure that the retaining clamps fit properly.

8 Troubleshooting

-	
(NI)
	IN /
\sim	_

	Fault	Cause		Remedy	
+	Motor does not start	 Fuse of the mains blown. 	s socket has	Connect mains fuse.	
		 Overload protecti has tripped. 	on switch •	Switch off the vacuum cleaner and allow it to cool for approx. 5 minutes. If the cleaner cannot be started again, contact the Nilfisk-Alto service department.	
		 Motor is faulty. 	•	Have motor changed by Nilfisk-Alto Service.	
‡	Motor does not run in automatic mode 1)	 Power tool/pneun defective or not c properly. 		Check that the power tool works or that the plug is inserted correctly.	
		 The power rating electrical tool is to 		Note that minimum power rating is P>40W	
‡	Reduced suction power	 Suction power se suction power con low. 		Set suction power in accordance with section "Setting suction power".	
		> Clogged suction I	nose/nozzle.	Clean suction hose/nozzle	
		 Tank, disposal ba bag is full. 	g or filter •	See "Emptying tank" or "Replacing disposal bag, filter bag" sections.	
		 Filter element is of 	elogged.	• See section "Cleaning filter element" and "Replacing filter element".	
		 Seal between tan section of vacuun faulty or missing. 		Replace seal.	
		 Cleaning mechar defective. 	iism is •	Contact Nilfisk-Alto Service.	
‡	No suction power during wet cleaning	> Tank is full.	•	Switch off the cleaner. Empty the tank.	
‡	Voltage fluctuations	 Impedance of port too high. 	wer supply is •	Connect the cleaner to another socket closer to the fuse box. Voltage fluctuations over 7% should not occur if the impedance at the transfer point is $\leq 0.15 \ \Omega$.	

Image: Second Second

9.1	Recycling the cleaner	 Make the old cleaner unusable immediately. 1. Unplug the cleaner. 2. Cut the power cord. 3. Do not discard of electrical appliances with household waste. As specified in European Directive 2002/96/EC on old electrical and electronic appliances, used electrical goods must be collected separately and recycled ecologically. Contact your local authorities or your nearest dealer for further information. 				
9.2	Guarantee	Our general conditions of business are applicable with regard to the guarantee. Unauthorised modifications to the appliance, the use of incorrect brushes in addition to using the appliance in a way other than for the intended purpose exempt the manufacturer from any liability for the resulting damage.				
9.3	Tests and approvals	Electrical tests must be performed in accordance with the provisions of safety regulations (BGV A3) and to DIN VDE 0701 Part 1 and Part 3. In accordance with DIN VDE 0702 these tests must be performed at regular intervals and after repairs or modifications. The vacuum cleaner has been approved in accordance with IEC/EN 60335-2-69.				
		60335-2-69.				
9.4	EC declaration of conformity	60335-2-69.	EC declaration of conformity			
9.4						
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8				
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8 D-89287 Bellenberg	conformity			
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8 D-89287 Bellenberg Product:	Conformity Vacuum cleaner for wet and dry operation			
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8 D-89287 Bellenberg Product: Model:	Conformity Vacuum cleaner for wet and dry operation ATTIX 30 / 40 / 50			
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8 D-89287 Bellenberg Product: Model: Description: The design of the appliance corresponds to the following	conformityVacuum cleaner for wet and dry operationATTIX 30 / 40 / 50230-240 V~, 50/60 HzEC Machine Directive 2006/42/ECEC Low Voltage Directive 2006/95/EC			
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8 D-89287 Bellenberg Product: Model: Description: The design of the appliance corresponds to the following pertinent regulations:	conformityVacuum cleaner for wet and dry operationATTIX 30 / 40 / 50230-240 V~, 50/60 HzEC Machine Directive 2006/42/ECEC Low Voltage Directive 2006/95/ECEC EMC Directive 2004/108/ECEN ISO 12100-1, EN ISO 12100-2EN 60335-1EN 60335-2-69			
9.4		ALTO Deutschland GmbH Guido-Oberdorfer-Straße 2-8 D-89287 Bellenberg Product: Model: Description: The design of the appliance corresponds to the following pertinent regulations: Applied harmonized standards:	conformityVacuum cleaner for wet and dry operationATTIX 30 / 40 / 50230-240 V~, 50/60 HzEC Machine Directive 2006/42/ECEC Low Voltage Directive 2006/95/ECEC EMC Directive 2004/108/ECEN ISO 12100-1, EN ISO 12100-2EN 60335-1EN 60335-2-69EN 55014-1, EN 55014-2, EN 61000-3-2			

9.5 Technical data

			ATTIX 30 / 40 / 50				
		EU	CH, DK	GB 230/240 V	GB 110 V	US 120 V	Charger
Voltage	V	230		230/240	110	120	100-240
Mains frequency	Hz			50/60		60	50-60
Fuse A 16 10		13	16	15			
Power consumption	W		1200 100			00	50

ATTIX									
		30-01 30-01 PC	40-01 PC	50-01 PC	30-11 PC 30-21 PC 30-21 XC	40-21 PC 40-21 XC	50-21 PC 50-21 XC	30-01 BATT	Charg- er
Connected load for appliance socket	W		_			2400			—
Total connected load	W		1200		3600				50
Air flow rate	l/min				3700 (PC) 3800 (XC)			2220	
Vacuum	mbar				250			137	
Sound pressure level at a distance of 1 m, EN 60704-1	dB(A)	62							
Sound level	dB(A)	59							
Power cord: Length		7,5							
Power cord: Type		1) (EU,CH) 2) (GB 110 V) 3) (GB 230 V) 4) (US)	5) (EU)	5) (EU) 6) (CH) 7) (US)	5) (EU,DK) 8) (GB 110V) 5) (GB 230V) 6) (CH) 7) (US)	5) (EU,DK)	5) (EU,DK) 8) (GB 110V) 5) (GB 230V) 6) (CH) 7) (US)		
Protection class							II		
Type of protection		IP X4 (splash water protected)							
Radio interference level		EN 55014-1							
Tank volume	I	30	36	45	30	36	45	30	
Width	mm	360	440	360	360	440	360		300
Depth	mm	450	450	450	450	450	450		262
Height	mm	600	740	750	600	740	750		106
Weight	kg	10	12	11	10 (PC) 11 (XC)	12 (PC) 13 (XC)	11 (PC) 12 (XC)	13	1
1) = H05RR-F 2x0,75	3) = H05	5RR-F 2x0,75		5) = H05RR-F 3G1,5			7) = SJTW-A AWG 14/3		
2) = H05BQ-F 2x1,0	4) = SJTW-A AWG 18/2			6) = H05RR-F 3G1,0			8) = H07BQ-F 3G2,5		

9.6 Optional accessories

Description	Order No.				
Fleece filter bag Attix 30 (5 pcs.)	302004000				
Fleece filter bag Attix 40, 50 (5 pcs.)	302004004				
Disposal bag Attix 30, 40, 50 (5 pcs.)	302000728				
Zylindrical filter element PC	302000461				
Flat filter element XC (2 Stück)	302002842				
Cloth insert filter Attix 30	302000525				
Cloth insert filter Attix 50	302000606				
Nilfisk-Alto-Foam-Stop (6x1I)	8469				

¹⁾ Optional accessories / Option depending on model

Nilfisk ΑΙΤΟ

Why Compromise

http://www.nilfisk-alto.com

HEAD QUARTER

DENMARK

Nilfisk-Advance Group Sognevej 25 DK-2605 Brøndby Tel.: +45 4323 8100 Fax: +45 4343 7700 E-mail: mail.com@nilfisk-advance.dk

SALES COMPANIES

AUSTRALIA

Nilfisk-ALTO 48 Egerton St. P.O. Box 6046 Silverwater, N.S.W. 2128 Tel.: +61 2 8748 5966 Fax: +61 2 8748 5960

AUSTRIA

Nilfisk-Advance GmbH Nilfisk-ALTO Metzgerstrasse 68 Tel.: +43 662 456 400-0 Fax: +43 662 456 400-0 Fax: +43 662 456 400-34 E-mail: info@nilfisk-alto.at

BELGIUM

Nilfisk-ALTO Division of Nilfisk-Advance n.v-s.a. Internationalelaan 55 (Gebouw C3/C4) 1070 Brussel Tel.: +32 02 467 60 40 Fax: +32 02 466 61 50 E-mail: info.be@nilfisk-alto.com

CANADA

Clarke Canada Part of the Nilfisk-Advance Group 4080 B Sladeview Crescent, Unit 1 Mississauga, Ontario L5L 5Y5 Tel.: +1 905 569 0266 Fax: +1 905 569 8586

CHINA Nilfisk-Advance (Shenzhen) Ltd. Blok 3, Unit 130 1001 Honghua Road Int. Commercial & Trade Center Fuitian Free Trade Zone 518038 Shenzhen Tel.: +86 755 8359 7937 Fax: +86 755 8359 1063

CZECH REPUBLIC

ALTO Ceská Republika s.r.o. Zateckých 9 14000 Praha 4 Tel.: +420 24 14 08 419 Fax: +420 24 14 08 439 E-mail: info@alto-cz.com

DENMARK

Nilfisk-Advance A/S Nilfisk-Advance A/S Industrivej 1 9560 Hadsund Tel.: +45 7218 2100 Fax: +45 7218 2105 E-mail: salg@nilfisk-alto.dk E-mail: service@nilfisk-alto.dk www.nilfisk-alto.dk

Nilfisk-ALTO Food division Division of Nilfisk-Advance A/S Blytækkervej 2 9000 Aalborg Tel.: +45 7218 2100 Fax: +45 7218 2099 E-mail: scanio.technology@nilfisk-alto.dk

FINLAND

Nilfisk-Advance Oy Ab Piispantilankuja 4 02240 Espoo Tel.: +358 207 890 600 Fax: +358 207 890 601 E-mail: jukka.lehtonen@nilfisk-alto.com www.nilfisk-advance.fi

FRANCE

Nilfisk-ALTO ALTO France SAS

Aéroparc 1 19 rue Icare 67960 Entzheim Tel.: +33 3 88 28 84 00 Fax: +33 3 88 30 05 00 E-mail: info@nilfisk-alto.fr www.nilfisk-alto.com

GERMANY

GERMANY Nilfisk-ALTO Division of Nilfisk-Advance AG Guido-Oberdorfer-Strasse 10 89287 Bellenberg Tel.: +49 0180 5 37 37 37 Fax: +49 0180 5 37 37 38 E-mail: info@nilfisk-alto.de www.nilfisk-alto.de

GREECE

Nilfisk-Advance SA 8, Thoukididou str. 164 52 Argiroupolis Tel.: +30 210 96 33443 Fax: +30 210 96 52187 E-mail: nilfisk-advance@clean.gr

HOLLAND

Nilfisk-ALTO Division of Nilfisk-Advance BV Camerastraat 9 3322 BB Almere Tel.: +31 36 546 07 60 Fax: +31 36 546 07 61 E-mail: info.nl@nilfisk-alto.nl www.nilfisk-alto.nl

HONG KONG

Nilfisk-Advance Ltd. 2001 HK Worsted Mills Ind'I Bldg. 31-39 Wo Tong Tsui St. Kwai Chung Tel.: +852 2427 5951 Fax: +852 2487 5828

HUNGARY

Nilfisk-Advance Kereskedelmi Kft. II. Rákóczi Ferenc út 10 2310 Szigetszentmiklos-Lakihegy Tel: +36 2447 5550 Fax: +36 2447 5551 E-mail: info@nilfisk-advance.hu www.nilfisk-advance.hu

ITALY Nilfisk-ALTO

Niftisk-ALIO Divisione di Nilfisk-Advance A/S Località Novella Terza 26862 Guardamiglio (LO) E-mail: d.puglia@nilfisk-advance.it

JAPAN Nilfisk-Advance Inc. 1-6-6 Kita-shinyokohama, Kouhoku-ku Yokohama, 223-0059 Tel.: +8145 548 2571 Fax: +8145 548 2541

MALAYSIA

Nillfisk-Advance Sdn Bhd Sd 14, Jalan KIP 11 Taman Perindustrian KIP Sri Damansara 52200 Kuala Lumpur Tel.: +60 3 603 6275 3120 Fax: +60 3 603 6274 6318

MEXICO

MEXICO Nilfisk-Advance de Mexico, S. de R.L. de C.V. Prol. Paseo de la Reforma 61, 6-A2 Col. Paseo de las Lomas 01330 Mexico, D.F. Tel: +52 55 2591 1002 (switchboard) Fax: +52 55 2591 1002 ext. 229 E-mail: info@advance-mx.com www.nilfisk-advance.com.mx

NEW ZEALAND

NEW ZEALAND Nilfisk-ALTO, Division of Nilfisk-Advance NZ Private Bag 92829 6 Rockridge Avenue Penrose, Auckland Tel: +64 9 525 0092 Fax: +64 9 525 6440

NORWAY Nilfisk-Advance AS Bjørnerudveien 24
 Djoine i davelet 24

 1266 Oslo

 Tel.: +47 22 75 17 70

 Fax: +47 22 75 17 71

 E-mail: info@nilfisk-alto.no

 www.nilfisk-alto.no

POI AND

Nilfisk-Advance Sp. Z.O.O. 05-800 Pruszków ul. 3-go MAJA 8

Tel.: +48 22 738 37 50 Fax: +48 22 738 37 51 E-mail: info@nilfisk-alto.pl www.nilfisk-alto.pl

PORTUGAL Nilfisk-ALTO Division of Nilfisk-Advance Lda. Sintra Business Park Zona Industrial Da Abrunheira Edificio 1, 1° A P2710-089 Sintra Tel.: +35 808 200 537 Fax: +35 121 911 2679 E-mail: mkt@nilfisk-advance.es

RUSSIA Nilfisk-Advance LLC Vyatskaya str. 27, bld. 7 127015 Moskow Tel.: +7 495 783 96 02 Fax: +7 495 783 96 03 E-mail: info@nilfisk-advance.ru

SINGAPORE

Nilfisk-Advance Pte. Ltd. Nilfisk-ALTO Division 40 Loyang Drive Singapore 508961 Tel.: +65 6 759 9100 Fax: +65 6 759 9133 E-mail: sales@nilfisk-advance.com.sg

SPAIN

Nifisk-ALTO Division of Nilfisk-Advance S.A. Torre D'Ara Paseo del Rengle, 5 Pl. 10 08302 Mataró Tel.: +3 4 902 200 201 Fax: +34 93 757 8020 E-mail: mkt@nilfisk-advance.es

SWEDEN

ALTO Sverige AB Member of Nilfisk-Advance Group Aminogatan 18, Box 4029 431 04 Mölndal Tel:: +46 31 706 73 00 Fax: +46 31 706 73 40 Email: inf @inification co E-mail: info@nilfisk-alto.se www.nilfisk-alto.se

TAIWAN Nilfisk-Advance Taiwan Branch Niffisk-Advance Talwan No. 5, Wan Fang Road Taipei Tel.: +886 227 002 268 Fax: +886 227 840 843

THAILAND

Nilfisk-Advance Co. Ltd. 89 Soi Chokechai-Ruammitr Viphavadee-Rangsit Road Ladyao, Jatuchak, Bangkok 10900 Tel.: +66 2 275 5630 Fax: +66 2 691 4079

TURKEY Nilfisk-Advance Profesional Temizlik Ekipmanlari Tic. A/S. Necla Cad. NI.: 48 Yenisahra / Kadiköy Istanbul Tel.: +90 216 470 08 - 60 E-mail: info.tr@nilfisk-advance.com www.nilfisk-advance.com.tr

UNITED KINGDOM Nilfisk-ALTO Division of Nilfisk-Advance Ltd. Gilwilly Industrial Estate, Penrith Cumbria CA11 9BQ Tel.: +44 1 768 86 89 95 Fax: +44 1 768 86 47 13 E-mail: sales@nilfisk-alto.co.uk www.nilfisk-alto.co.uk

USA

Nilfisk-Advance Inc. 14600 21st Avenue North Plymouth, MN 55447-3408 Tel.: +1 800 989 2235 Fax: +1 800 989 6566 E-mail: info@advance-us.com www.advance-us.com

VIETNAM

Nilfisk-Advance Representative Office No. 46 Doc Ngu Str. Ba Dinh Dist. Hanoi Tel.: +84 4 761 5642 Fax: +84 4 761 5643 E-mail: nilfisk@vnn.vn